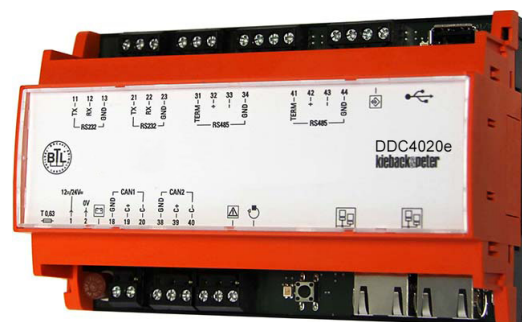## DDC4020e Automation Station

Application

Controller with BACnet communication

■ Stand-alone station for closed-loop and open-loop control, optimizing and monitoring functions

■ Customizable plain text for every parameter

■ Three closed-loop control circuits for heating or two for ventilation, which can be extended by hardware and software objects

■ PLC functions, free and as fixed macros (hardware objects)

■ Software objects for increasing energy efficiency and energy optimization

■ Communication
  – Via TCP/IP, Ethernet cable (min. Cat5, 10/100 Mbit) to enable use of the existing infrastructure
  – Built-in remote control via PC with browser without additional software or mobile end devices
  – Native BACnet in accordance with DIN EN ISO 16484-5, BACnet IP and BACnet MS/TP
  – Up to 99 DDC4000 automation stations with bidirectional data exchange

■ 2 buses (CAN-based), configurable for switch cabinet bus or fieldbus for connecting fieldbus modules (FBM/FBU or RBW4xxx) or switch cabinet bus modules BMD/BMA or SBM

■ Error message memory, event logging with date and time, incoming and outgoing messages are saved

■ Forwards messages to GSM-SMS and e-mail.

■ Trend value memory for max. 10.000 trend points.

■ Configuration using modern, effective object structure, considerably reducing project planning time.

■ Embedded Linux operating system for proven, stable use

■ Constant system monitoring of the bus communication and all connected DDC components, bidirectional data exchange possible.

Content   Page

Änderungen vorbehalten - Contents subject to change - Sous réserve de modifications - Reservado el derecho a modificación - Wijzigingen voorbehouden - Con riserva di modifiche - Innehåll som skall ändras - Zmeny vyhradené - Změny vyhrazeny - Zmiany zastrzeżone - Возможны изменения - A változtatások jogát fenntartjuk - 保留未经通知而改动的权力

kieback&peter

Important Information Regarding Product Safety

Safety Instructions

This data sheet contains information on installing and commissioning the product "DDC4020e". Each person who carries out work on this product must have read and understood this data sheet. If you have any questions that are not resolved by this data sheet, you can obtain further information from the supplier or manufacturer.

If the product is not used in accordance with this data sheet, the protection provided will be impaired.

Applicable regulations must be observed when installing and using the device. Within the EU, these include regulations regarding occupational safety and accident prevention as well as those from the VDE (Association for Electrical, Electronic & Information Technologies). If the device is used in other countries, it is the responsibility of the system installer or operator to comply with local regulations.

Mounting, installation and commissioning work on the devices may only be carried out by qualified technicians. Qualified technicians are persons who are familiar with the described product and who can assess given tasks and recognize possible dangers due to technical training, knowledge and experience as well as knowledge of the appropriate regulations.

Legend

WARNING

Indicates a hazard of medium risk which can result in death or severe bodily injury if it is not avoided.

CAUTION

Indicates a hazard of low risk which can result in minor or medium bodily injury if it is not avoided.

CAUTION

Indicates a hazard of medium risk which can result in material damage or malfunctions if it is not avoided.

NOTE

Indicates additional information that can simplify the work with the product for you.

Notes on Disposal

For disposal, the product is considered waste from electrical and electronic equipment (electronic waste) and must not be disposed of as household waste. Special treatment for specific components may be legally binding or ecologically sensible. The local and currently applicable legislation must be observed.

Product Description   **DDC4020e**

Item

|	
DDC4020e	Top hat rail mounted automation station

Technical Data

Nominal voltage	■ 24V AC +/- 10 %; 50..60 Hz; 20 VA; 0,83 A or
	■ DC 24 V +/- 10%; 13 W; 0.54 A or
	■ 12V DC +/-10 %; 13 W; 1,08 A
Fuses	Time-delay power fuse, 0.63 A
Bus connection / interfaces	■ 2 Ethernet RJ45 internally as a switch

Enables operation of up to 99 DDC4000 automation stations, users can establish worldwide network via active network components, BMS and BACnet client connection, 10/100 Mb/s, TCP/IP

■ 2 CAN buses, configurable as fieldbus or switch cabinet bus

- fieldbus, F-bus: up to 8 FieldBusModules FBM/FBU And additionally up to 8 RBW4xxx, 2000 m, 20 kBd, CAN, see page 5

- Switch cabinet bus; SBM bus: up to 4 switch cabinet bus modules SBM or BMA/BMD, 200 m; 40 kBd, CAN, see page 5

■ USB socket

For USB stick **only**: Update, backup/restoration

■ 2 serial RS232

- 1 for modem (terminals "21", "22", "23")

■ 2 RS485

- 1 for BACnet MS/TP (terminals "32", "33", "34")

32 devices, 1000 m, up to 115 kBd, routing in accordance with BACnet/IP

CAUTION

Only connect USB memory sticks to the USB socket. Do not connect any other USB devices.

|	
Total memory	4 GB flash; 512 MB RAM
Operating system	Embedded Linux
Mains failure data backup	via internal mini USV
Overvoltage category	III
Rated impulse voltage	800V
Level of contamination	2
Method of operation	Type 1
Degree of protection	IP20
Ambient temperature	0..55 °C (see installation note, p.7)
Ambient humidity	During operation: 20%..80% r.h., non-condensing Out of operation: 5% to 90% r.h., non-condensing
Mounting	Switch cabinet top hat rail TH 35-7.5 This device is intended for installation in a wall-mounted enclosure or switch cabinet with protection class I or II.
Dimensions	WxHxD 143,3 x 90 x 60 mm
Weight	0.26 kg

kieback&peter

Dimensions
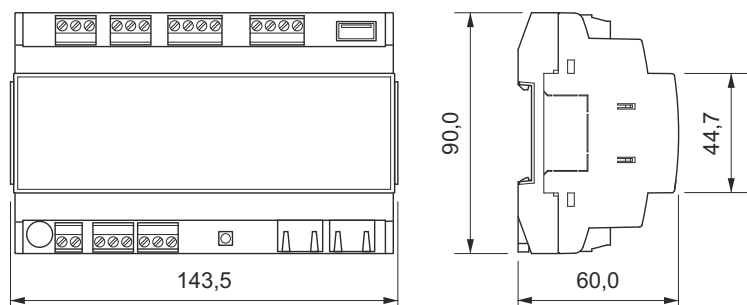
Accessories (included in delivery)

USBSTICK-DDC-MINI   USB stick

Connection
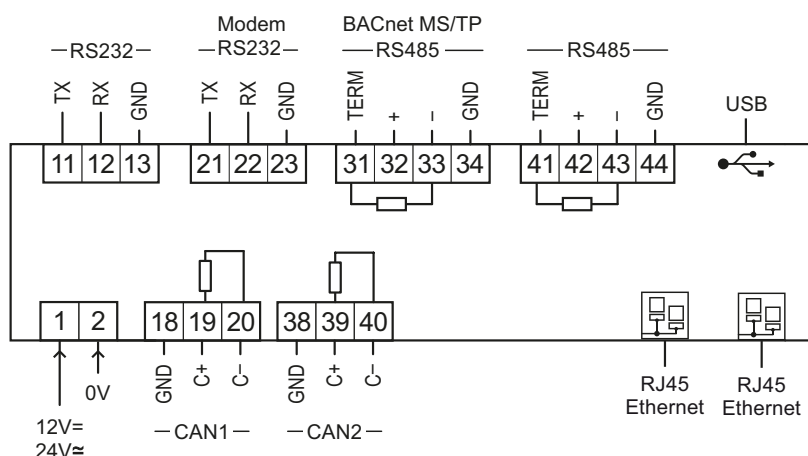
⚠ **CAUTION**

Ensure that no third persons can access your data during data transfer.

Only use secure solutions when connecting to public networks (VPN).

⚠ **CAUTION**

Use secure passwords to protect your data, devices and plants from unauthorized access. A secure password consists of lowercase and uppercase letters, numbers and special characters. It must also be long enough.

Change the passwords directly after transfer of the plant, commissioning of the device or importing software. Change the passwords at regular intervals. Use different passwords.

You are responsible for the security of your data and/or plant.

---

kieback&peter

Connectible modules

■ Maximum number of fieldbus modules that can be installed
up to 8 FieldBusModules FBM/FBU And additio nally up to 8 RBW4xxx,

Module	Number
FBG-FTL	4
FBK36	8
FBM018	8
FBM024	8
FBM034	8
FBM044	8
FBM18	8
FBM24	8
FBM34	8
FBM38	8
FBM44	8
FBM45	8
FBU410	8
MD200BUS	8
RBW420x	8
RBW430x	8

■ Maximum number of switch cabinet bus modules that can be installed
up to 4 switch cabinet bus modul es SBM or BMA/BMD

Module	Number
BMA4024	2
BMA4032	2
BMD4064	2
SBM41	1
SBM42	1
SBM45	1
SBM51/xx	1
SBM52/04	1

Further information can be found in the DDC4000 project planning documentation.

kieback&peter

Installation

> **CAUTION**
>
> Switching on the power supply of unparameterized products can lead to unforeseen consequences such as malfunctions or material damage.
>
> Switch on the power only after the device has been configured by the commissioning technician.

CAN bus

When connecting the CAN bus, use a cable with 2 x 2 leads stranded into a pair with plastic insulation and electrostatic shielding with a lead diameter of at least 0.8 mm. Use a stranded pair of wires for the data lines (+ and -) and another free wire for the ground (0).

At the end of the CAN bus (furthest point from the controller), install a terminating resistor of about 180 ohms between the two data lines (+ and -). The terminating resistor is included with the controller.

- When using CAN bus as a fieldbus, the maximum cable length is 2,000 m.
- When using CAN bus as a switch cabinet bus, the maximum cable length is 200 m.
- Make sure to observe the line topology for the CAN bus.

RS485 for BACnet MS/TP

To connect the MS/TP bus, use at least one cable of the type JY(St)Y 2x2x0.8 Lg:

Two x two leads stranded into a pair with plastic insulation and electrostatic shielding with a lead diameter of at least 0.8 mm and a characteristic impedance between 100 and 130 ohms.

Use a stranded pair of leads for the data lines and another free lead for the ground connection.

Observe the polarity of the data lines of the MS/TP. Terminal "33" supplies the inverted signal, it is usually labeled with -. Terminal "32" supplies the non-inverted signal, it is usually labeled with +. Terminal "34" is used for the ground connection.

At the start and end of the MS/TP bus, install a terminating resistor of ideally about 120 ohm between the two data lines.

The DDC4020e has an integrated 120 ohm resistor. It can be activated by means of a bridge between the terminals "32" + and "31" TERM.

Foreign devices often enable a switchable terminating resistor. Refer to the data sheet or the respective manufacturer's manual for further information.

Use bias resistors to maintain the bus idle level at a defined high level and to prevent noise being misinterpreted as a data signal. We recommend that you use network bias resistors on the first and last device on the bus.

A maximum of 2 devices on the bus may be equipped with network bias resistors.

The DDC4000 is fitted with a 680 ohm bis resistor that can be activated via configuration. Further information can be found in the DDC4000 project planning documentation

Foreign devices often offer optionally switchable bias resistors.

- The maximum possible bus length is 1000 m.
- A maximum of 32 devices can be operated on a bus segment.
- Observe the line topology for the RS485 bus.

Mounting

⚠️ **WARNING**

Contact with live parts of electrical domestic installation can cause death due to electric shock.

Mounting/removal may only be carried out when power is switched off.

🛈 **CAUTION**

If the device is installed in false ceilings, the maximum permitted ambient temperature is 45 °C.

Installation in floor boxes or similar systems is not permitted.

Removal

kieback&peter
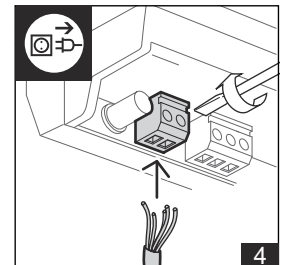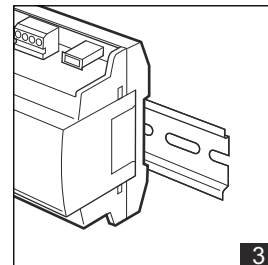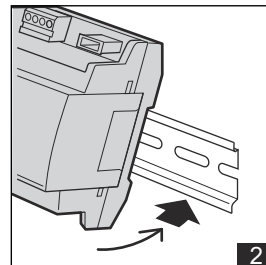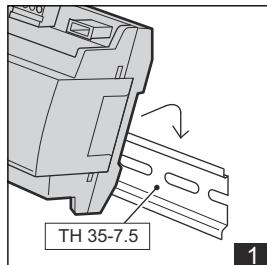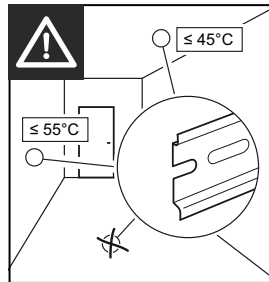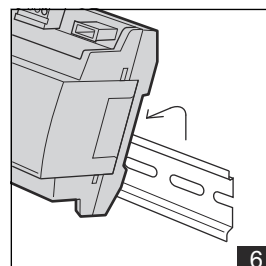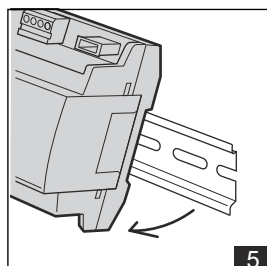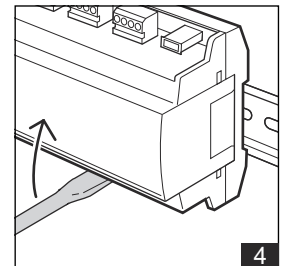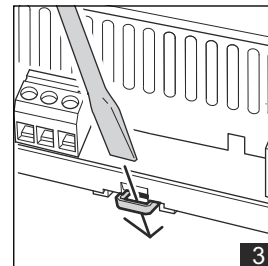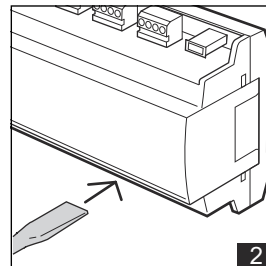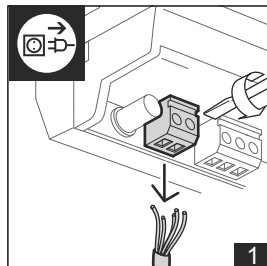
Push buttons and LED displays
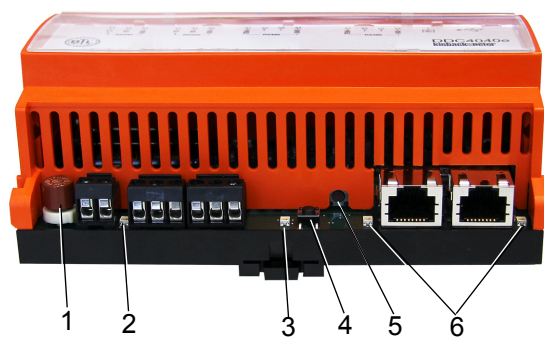
(1) Mains fuse
(2) Status LED nominal voltage
(3) Status-LED internal data storage
(4) Warm start push-button
(5) Reset button
(6) Status-LED Ethernet RJ45

kieback&peter