

## DELUGE VALVE

**MODEL: SD-DVH2**

### TECHNICAL DATA

NORMAL SIZE	200,150,100, 80, 50 NB
MATERIAL	Cast Steel ASTM A 216 WBC
SEVICE PRESSURE	1.4 to 17.5 Bar (20 to 250 PSI)
THREADED OPENING	BSPT
MOUNTING	Vertical or Horizontal
FACTORY HYDOSTATIC TEST PRESSURE	35 Kg/sq.cm. (500 PSI)
FLANGE CONNECTION	ANSI B 16.5 # 150 RF (FF-Optional)
WET PILOT SPRINKLER HEIGHT LIMITATION	As per graph in the catalogue
NET WEIGHT WIHTOUT TRIM	200 NB - 163 Kg 150 NB - 86 Kg 100 NB - 56 Kg 80 NB - 38 Kg 50 NB - 33 Kg
FINISH	RAL 3000
ORDERING INFORMATION	1. Size of Valve 2. Flange specification 3. Valve trim vertical or horizontal 4. Trim type



position, water pressure is transmitted through an external bypass check valve and restriction orifice from the system supply side to the top chamber, so that supply pressure in the top chamber act across the diaphragm operated clapper which holds the seat against the inlet supply pressure because of the differential pressure design.

On detection of fire the top chamber is vented to atmosphere through the outlet port via opened actuation devices. The top chamber pressure cannot be replenished through the restricted inlet port, and the upward force of the supply pressure lifts the clapper allowing the water flow to the system piping network and alarm devices.

### TRIM DESCRIPTION

The trims are functionally termed as Dry Pilot Trim, Wet Pilot Trim, Electric Trim and Test and Alarm Trim as per the method of actuation of the deluge valve.

The functionality of these trims is described below.

#### a) BASIC TRIM

Dry pilot operation uses a pilot line of closed Sprinkles/QB detectors containing air under pressure, located in the area to be protected. It requires regulated dry air supply with main supply point through restricted orifice. The air pressure to be maintained as specified in the catalogue of Dry Pilot Actuator. The pilot line is connected to air inlet side of actuator. The top chamber of the deluge valve is connected to water inlet side of actuator. When there is an air pressure drop, or due to release of any of the release device on detection of fire, the diaphragm of actuator is lifted and allows the water to drain.

This releases the water pressure in the top chamber of the deluge valve, allowing the deluge valve to

### DESCRIPTION

Deluge Valve is known as a system control valve in a deluge system, used for fast application of water in a spray system. Deluge valve protects areas such as power transformer installation, storage tank, conveyor protection and other industrial application etc. With the addition of foaming agent deluge valve can be used to protect aircraft hangar and inflammable liquid fire.

### VALVE OPERATION

SHIELD Deluge valve is a quick release, hydraulically operated diaphragm valve. It has three chambers, isolated from each other by the diaphragm operated clapper and seat seal. While in SET

open and water to flow into the system piping & alarm devices. Recommended air supply pressure for dry pilot trim system is 3.5 kg/sq.cm.

User must install non return valve at air supply connection to deluge valve trim.

### b) DRY PILOT TRIM (PNEUMATIC RELEASE)

Wet pilot operation uses a pilot line of closed Sprinklers/ QB Detectors containing pressurized water, supplied through the upstream side of the Deluge valve, through a restricted orifice. All the release lines are connected to a common release line. Due to release of any one of the release device, the water pressure in the top chamber of the Deluge valve drops and the Deluge valve opens.

### c) ELECTRIC RELEASE TRIM

To actuate a Deluge valve electrically, a solenoid valve is provided to drain the water from the top chamber of the Deluge valve. A pressure switch is provided to activate an electric alarm, to shut down the desired equipment or to give “Tripped” indication of the Deluge valve. In addition to this a pressure switch can also monitor “Low air pressure” and “Fire condition” when used in dry pilot airline.

### d) TEST AND ALARM TRIM

This trim is supplied with a test valve is provided to test the normal operation of the sprinkler alarm bell. The sprinkler alarm can be supplied additionally, which bells

on actuation of the Deluge valve.

### e) DRAIN AND DRIP TRIM

This consists of main and system drain valve in addition with drip valve.

## TRIM TYPES

The trims are designated as following.

W =Wet Pilot trim. D = Dry Pilot Trim

### a) Type SH2-TW and SH2-TD

This type of trim is basic trim required to operate the deluge valve. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

### b) Type SH2-TWD and SH2-TDD

This trim type is a combination of components of normal trim along with the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

### c) Type SH2-TWT and SH2-TDT

This trim type is a combination of components of normal trim along with the test and alarm trim. In dry pilot trim, an actuator is provided. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

TRIM MODEL NO.	TRIM DESCRIPTION	MOUNTING	SCHEMATIC NO.
SH2-TW	Basic Wet Pilot Trim	Vertical	Schematic 1
SH2-TD	Basic Dry Pilot Trim	Vertical	Schematic 2
SH2-TWT	Basic Wet Pilot Trim with Test and Alarm Trim	Vertical	Schematic 3
SH2-TDT	Basic Dry Pilot Trim with Test and Alarm Trim	Vertical	Schematic 4
SH2-TWD	Basic Wet Pilot Trim with Drip and Drain Trim	Vertical	Schematic 5
SH2-TDD	Basic Dry Pilot Trim with Drip and Drain Trim	Vertical	Schematic 6
SH2-NTW	Basic Wet Pilot Trim with Test and Alarm Trim & Drip and Drain Trim	Vertical	Schematic 7
SH2-NTD	Basic Dry Pilot Trim with Test and Alarm Trim & Drip and Drain Trim	Vertical	Schematic 8
SH2-TW	Basic Wet Pilot Trim	Horizontal	Schematic 9
SH2-TD	Basic Dry Pilot Trim	Horizontal	Schematic 10
SH2-TWT	Basic Wet Pilot Trim with Test and Alarm Trim	Horizontal	Schematic 11
SH2-TDT	Basic Dry Pilot Trim with Test and Alarm Trim	Horizontal	Schematic 12
SH2-TWD	Basic Wet Pilot Trim with Drip and Drain Trim	Horizontal	Schematic 13
SH2-TDD	Basic Dry Pilot Trim with Drip and Drain Trim	Horizontal	Schematic 14
SH2-NTW	Basic Wet Pilot Trim with Test and Alarm Trim & Drip and Drain Trim	Horizontal	Schematic 15
SH2-NTD	Basic Dry Pilot Trim with Test and Alarm Trim & Drip and Drain Trim	Horizontal	Schematic 16

**d) Type SH2-NTW and SH2-NTD**

This trim type is a combination of components of normal trim along with the test and alarm trim as well as the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

**RESETTING PROCEDURE**

- a. Close the upstream side stop valve provided below the deluge valve to cease the flow of water.
- b. Open both the drain valves/ drain plugs and close when the flow of water has ceased.
- c. Close the release device/replace the Sprinkler if release was through Sprinkler/ QB Detector.
- d. Inspect and release if required, or close the section of the detection system subjected to "Fire condition".
- e. In case of dry pilot detection system, open the air supply valve to build-up air pressure. Open the priming valve fully. Open the upstream side of the stop valve provided below the Deluge valve. No water should flow into the system.
- f. Where priming shut off valve (optional) is provided for resetting, then the water need to be drained from upstream side of valve.

**Note:**The valve can be reset without undergoing above procedure, by just closing/replacing the release device as valve is auto reset type. The reset time may be long or cause vibration while closing depending on back pressure at the outlet of the valve.

**CAUTION**

- a. Do not close the downstream and upstream stop valves, while the system is in service.
- b. The releasing device must be maintained in open position, when actuated, to prevent the deluge valve from closure if anti shut off valve is not provided.
- c. While using a Deluge valve in the wet pilot system, the height and length of the wet pilot detection line is to be limited, as shown in the wet pilot sprinkler height limitation graph.
- d. Do not connect the Sprinkler Alarm outlet drain line to close a common drain as it may create back pressure and Sprinkler Alarm may not function.
- e. Deluge valve must have support to absorb sudden opening or closing vibration shock to the piping.
- f. To avoid water damage, take precautions when opening

the water supply main control valve, since water will flow from all open system valves.

g. The responsibility of maintenance of the protection system & devices in proper operating condition lies with the owner of the system.

h. Deluge Valve & its trim shall be maintained at a minimum temperature of 4°C, Heat tracing is not permitted.

i. Deluge Valve must be used in pressurised system.

**SYSTEM TESTING PROCEDURE**

(i) Keep the upstream side of the stop valve partially open. To avoid water flow to system side close the system side stop valve. This valve is to be kept in open position after the testing is completed.

(ii) Let any of the release devices to trip. This will result in sudden drop of water pressure in the deluge valve top chamber which in turn will open the deluge valve. Close the upstream side stop valve immediately.

(iii) Reset the valve as per the procedure given under heading "RESETTING PROCEDURE FOR THE DELUGE VALVE".

**INSPECTION AND MAINTENANCE**

Installed system piping network must be flushed properly before placing the Deluge valve in service.

A qualified and trained person must commission the system. After few initial successful tests, an authorized person must be trained to perform inspection and testing of the system. It is recommended to have regular inspection and test run of the system as per NFPA guideline or in accordance to the organisation having local jurisdiction.

**(i) WARNING**

Inspection and testing is to be carried out only by authorised and trained personnel. DO NOT TURN OFF the water supply or close any valve to make repair(s) or test the valve, without placing a roving fire patrol in the area covered by the system. Also inform the local security personnel and central alarm station, so that there is no false alarm signal.

It is recommended to carry out physical inspection of the system at least twice in a week. The inspection should verify that all the control valves are in proper position as per the system requirement and that there are no damages to any component. The frequency of inspections must be increased in the presence of contaminated water supplies, corrosive/ scaling water supplies, and corrosive atmospheres.

**(ii) NORMAL CONDITION**

(a) All main valves are open and are sealed with tamper proof seal

- (b) Drain valves must be kept closed
- (c) No leak or drip is detected from the drip valve
- (d) All the gauges except the system side water pressure gauge, should show the required pressure
- (e) There should be no leakage in the system

#### **(iii) NORMAL CONDITION TEST**

- (a) The system should be checked for normal condition at least once in a week
- (b) Test the sprinkler alarm bell or electric alarm by turning the alarm test valve to the test position. The alarm should sound. This test should be carried out at least once in a week
- (c) Depress the drip valve knob. Significant accumulation indicates a possible seat leakage
- (d) Conduct the water flow test as per the procedure of system testing at least once a month.

#### **(iv) PERIODIC CHECK**

Conduct the water flow test by actuating few of the release devices provided in the system. Clean all strainer(s) and priming line restriction. This test is to be carried out at least once in three months.

### **ABNORMAL CONDITION**

#### **(i) ALARM FAILS TO SOUND**

- (a) Check for any obstruction in the alarm test line, make certain that the sprinkler alarm is free to operate
- (b) If an electric alarm is provided, check the electrical circuitry to the alarm


#### **(ii) FALSE TRIPS**

- (a) Check for clogging in priming line, restriction orifice check valve, priming valve & strainer
- (b) Leakage in the release system
- (c) The deluge air panel orifice clogged or low supply pressure


#### **(iii) LEAKAGE THROUGH THE DELUGE VALVE**

- (a) Damaged deluge valve seat or obstruction on the seat face by foreign object
- (b) Leakage in release system
- (c) Partly clogged priming line restriction orifice check valve
- (d) Low air pressure on release system line or leakage in release system

## DELUGE VALVE MODEL - SD-DVH2

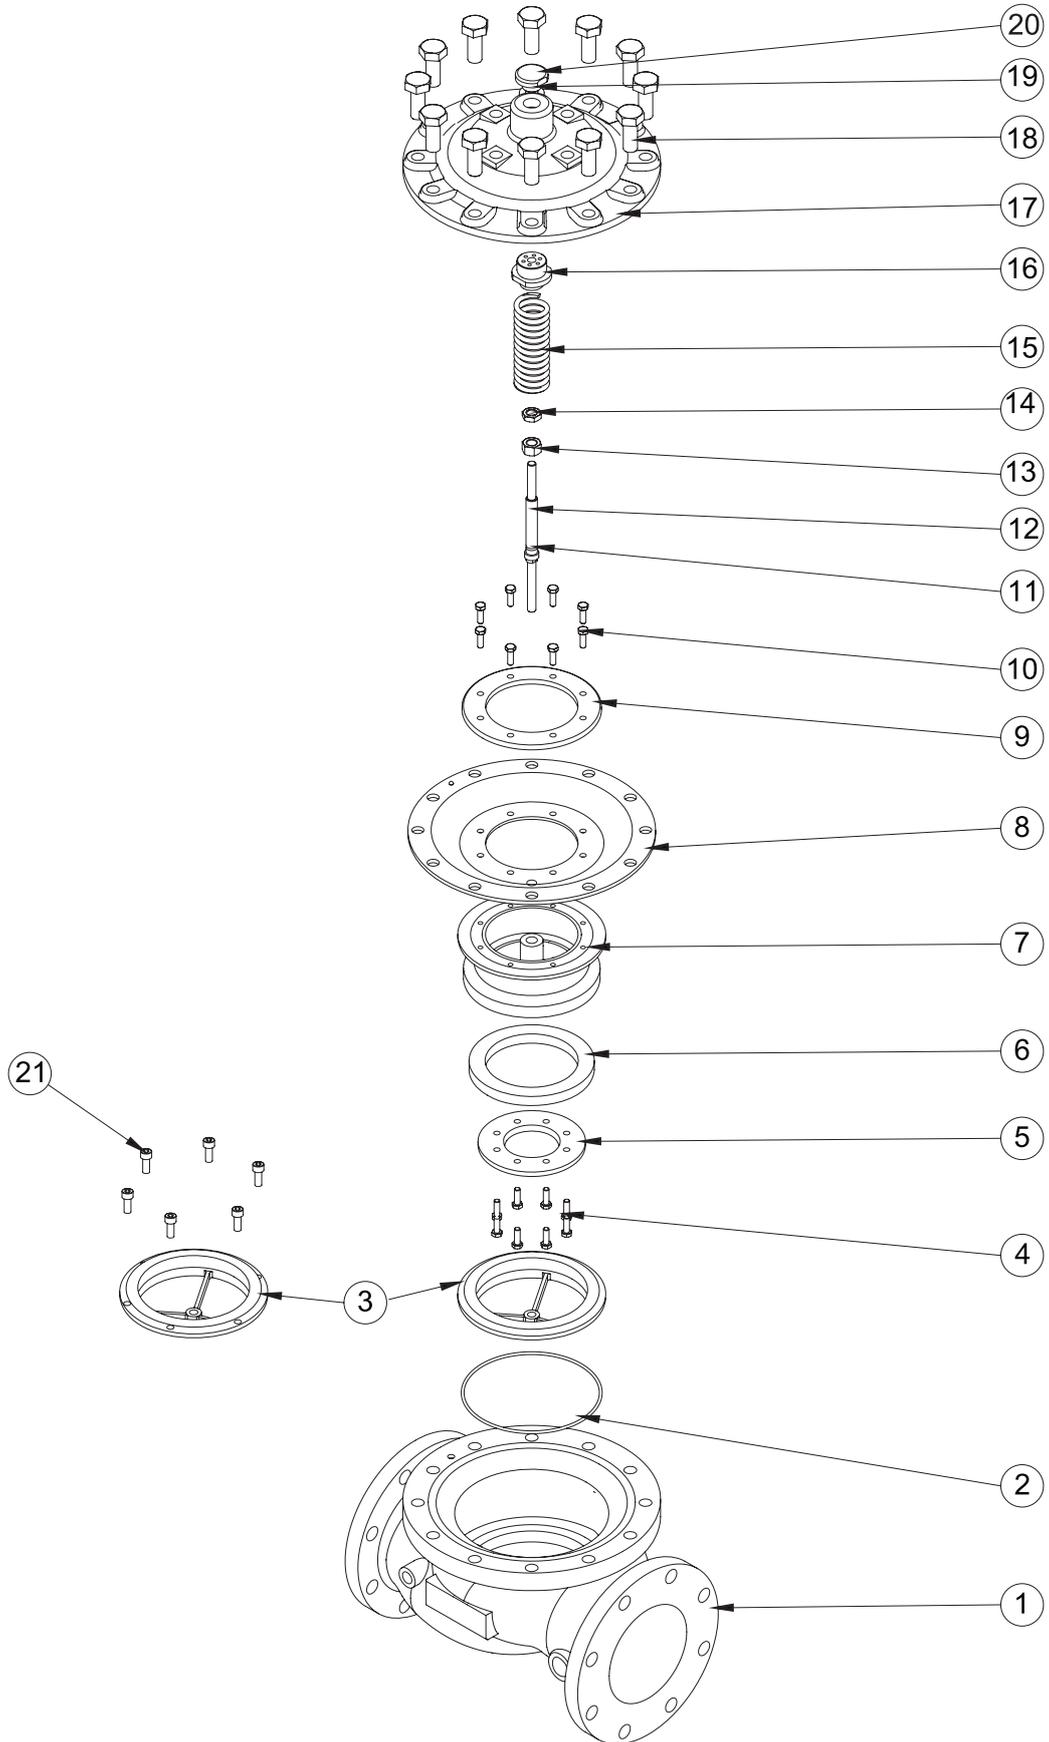

## DELUGE VALVE MODEL - SD-DVH2

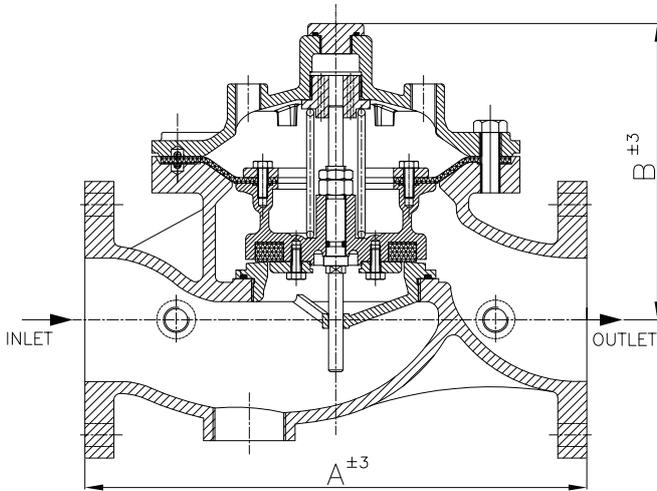

Dimension in mm. (Approximate)

Valve Nominal Size	'A'	'B'
200 NB	552	332
150 NB	462	282
100 NB	412	245
80 NB	372	232
50 NB	320	232

## PART LIST

ITEM	PART NO.					DESCRIPTION	QTY.				MATERIAL SPECIFICATION
	200 NB	150 NB	100 NB	80 NB	50 NB		200 NB	150 NB	100 NB	80/50 NB	
1	NA	NA	NA	NA	NA	Housing	1	1	1	1	Cast Steel
2	H2202	H2602	H2102	H2802	H2502	"O" Ring	1	1	1	1	Neoprene Rubber
3	H2203	H2603	H2103	H2803	H2503	Seat	1	1	1	1	Stainless Steel*
4	H2204	H2604	H2104	---	---	Bolt	8	4	4	---	Stainless Steel
5	H2205	H2605	H2105	H2805	H2505	Rubber Clamp	1	1	1	1	Ductile Iron**
6	H2206	H2606	H2106	H2806	H2506	Rubber Seat	1	1	1	1	Neoprene Rubber
7	H2207	H2607	H2107	H2807	H2507	Clapper	1	1	1	1	Ductile Iron**
8	H2208	H2608	H2108	H2808	H2508	Diaphragm	1	1	1	1	Neoprene Rubber
9	H2209	H2609	H2109	H2809	H2509	Clamp Ring	1	1	1	1	Ductile Iron**
10	H2210	H2610	H2110	H2810	H2510	Bolt	12	8	8	8	Stainless Steel
11	H2211	H2611	H2111	H2811	H2511	"O" Ring	1	1	1	1	Neoprene Rubber
12	H2212	H2612	H2112	H2812	H2512	Spindle	1	1	1	1	Stainless Steel
13	H2213	H2613	H2113	H2813	H2513	Nut	1	1	1	1	Stainless Steel
14	H2214	H2614	H2114	H2814	H2514	Lock Nut	1	1	1	1	Stainless Steel
15	H2215	H2615	H2115	H2815	H2515	Spring	1	1	1	1	Stainless Steel
16	H2216	H2616	H2116	H2816	H2516	Adaptor	1	1	1	1	Brass
17	NA	NA	NA	NA	NA	Cover	1	1	1	1	Cast Steel
18	H2218	H2618	H2118	H2818	H2518	Bolt	16	12	12	12	Carbon Steel
19	H2219	H2619	H2119	H2819	H2519	"O" Ring	1	1	1	1	Neoprene Rubber
20	H2220	H2620	H2120	H2820	H2520	Plug	1	1	1	1	Steel Plated
21	H2221	---	---	---	---	Allen Bolt	6	---	---	---	Stainless Steel


NA - Part Replacement Not Available

\* Stainless Steel is standard supply Bronze is optional supply.

\*\* Ductile Iron is standard supply Bronze/Stainless Steel is optional supply.

## SCHEMATIC FOR WET PILOT BASIC TRIM FOR VERTICAL MOUNTING


SH2-TW

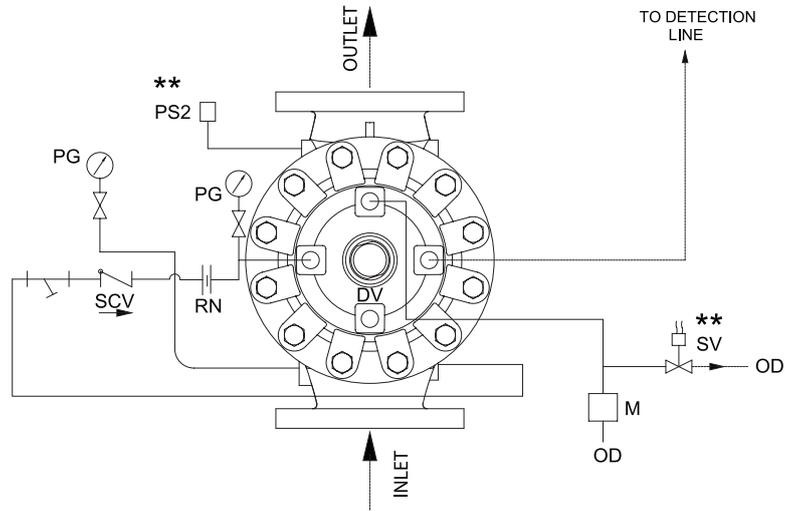

SCHEMATIC 1

## SCHEMATIC FOR DRY PILOT BASIC TRIM FOR VERTICAL MOUNTING

SH2-TD

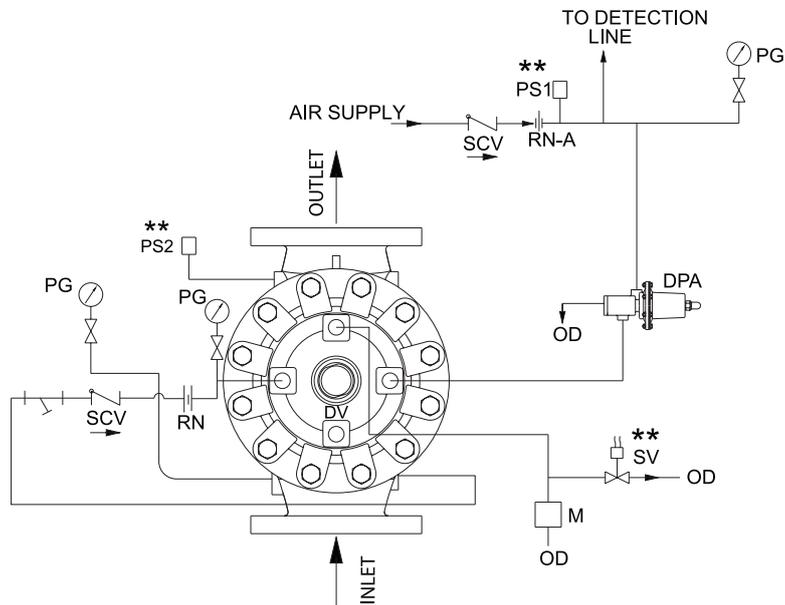


SCHEMATIC 2

DV	Deluge Valve	∇	Valve	↯	Swing Check Valve
SV	Solenoid Valve	---	By User	∠	Angle Valve
G	Sprinkler Alarm (WMG)	**	Optional	DPA	Dry Pilot Actuator
M	Emergency Release Station	⊥	Strainer	RN-A	Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)	OD	Open Drain	SCV	Swing Check Valve
PS1	Low Air Alarm Pressure Switch	PG	Pressure Gauge		
PS2	Waterflow Pressure Alarm Switch				

## SCHEMATIC FOR WET PILOT BASIC TRIM WITH TEST & ALARM TRIM FOR VERTICAL MOUNTING


SH2-TWT

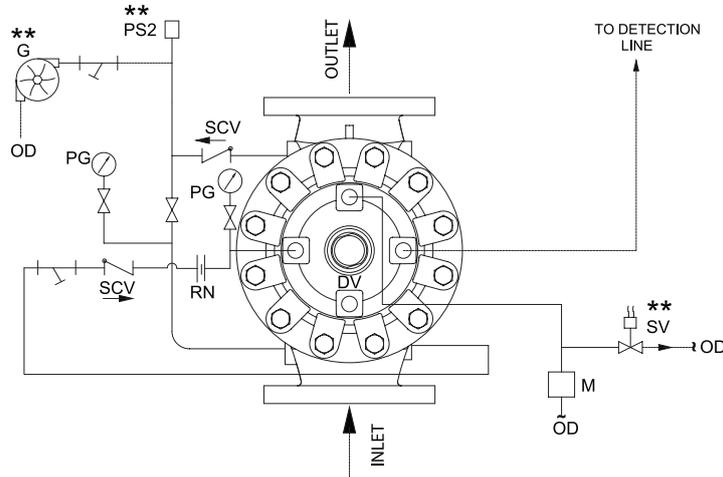

SCHEMATIC 3

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH TEST & ALARM TRIM FOR VERTICAL MOUNTING

SH2-TDT

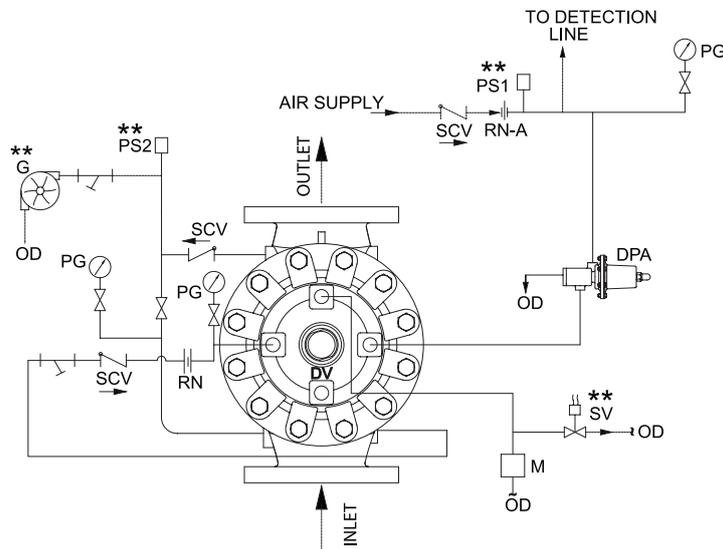


SCHEMATIC 4

DV	Deluge Valve	∩	Valve	↗	Swing Check Valve
SV	Solenoid Valve	---	By User	⌵	Angle Valve
G	Sprinkler Alarm (WMG)	**	Optional	DPA	Dry Pilot Actuator
M	Emergency Release Station	⌵	Strainer	RN-A	Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)	OD	Open Drain	SCV	Swing Check Valve
PS1	Low Air Alarm Pressure Switch	PG	Pressure Gauge		
PS2	Waterflow Pressure Alarm Switch				

## SCHEMATIC FOR WET PILOT BASIC TRIM WITH DRIP & DRAIN TRIM FOR VERTICAL MOUNTING


SH2-TWD

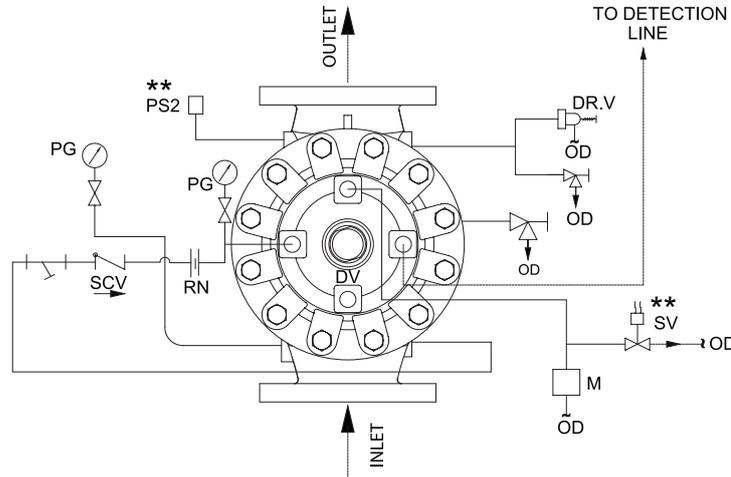

SCHEMATIC 5

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH DRIP & DRAIN TRIM FOR VERTICAL MOUNTING

SH2-TDD

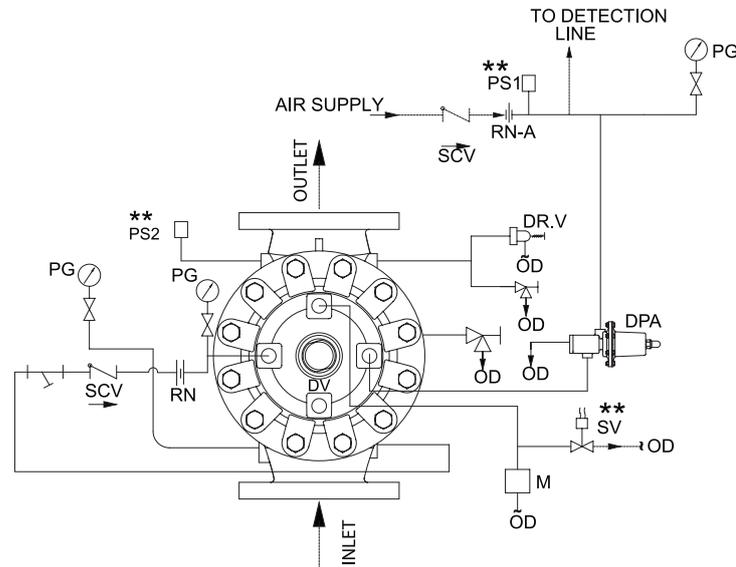


SCHEMATIC 6

DV	Deluge Valve	∩	Valve	↗	Swing Check Valve
SV	Solenoid Valve	---	By User	⌵	Angle Valve
G	Sprinkler Alarm (WMG)	**	Optional	DPA	Dry Pilot Actuator
M	Emergency Release Station	⌵	Strainer	RN-A	Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)	PG	Pressure Gauge	SCV	Swing Check Valve
PS1	Low Air Alarm Pressure Switch				
PS2	Waterflow Pressure Alarm Switch				

## SCHEMATIC FOR WET PILOT BASIC TRIM WITH TEST AND ALARM TRIM & DRIP AND DRAIN TRIM FOR VERTICAL MOUNTING


SH2-NTW

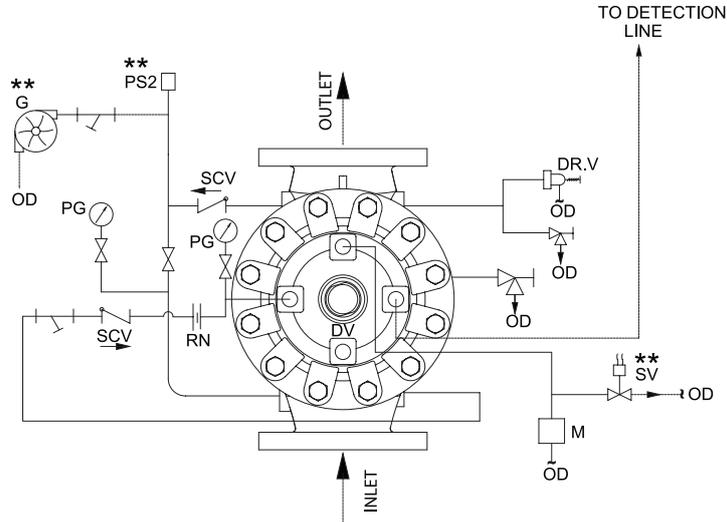

SCHEMATIC 7

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH TEST AND ALARM TRIM & DRIP AND DRAIN TRIM FOR VERTICAL MOUNTING

SH2-NTD

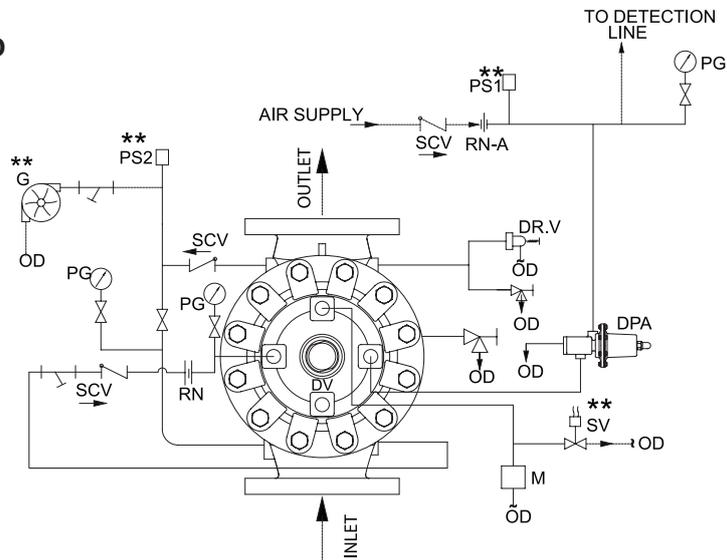

SCHEMATIC 8

DV Deluge Valve  
 SV Solenoid Valve  
 G Sprinkler Alarm (WMG)  
 M Emergency Release Station  
 RN Restriction Nozzle (Priming Line)  
 PS1 Low Air Alarm Pressure Switch  
 PS2 Waterflow Pressure Alarm Switch


Valve  
 --- By User  
 \*\* Optional  
 Strainer  
 OD Open Drain  
 PG Pressure Gauge

Swing Check Valve  
 Angle Valve  
 DPA Dry Pilot Actuator  
 RN-A Restriction Nozzle (Air Line)  
 SCV Swing Check Valve



## SCHEMATIC FOR WET PILOT BASIC TRIM WITH TEST AND ALARM TRIM FOR HORIZONTAL MOUNTING


SH2-TWT

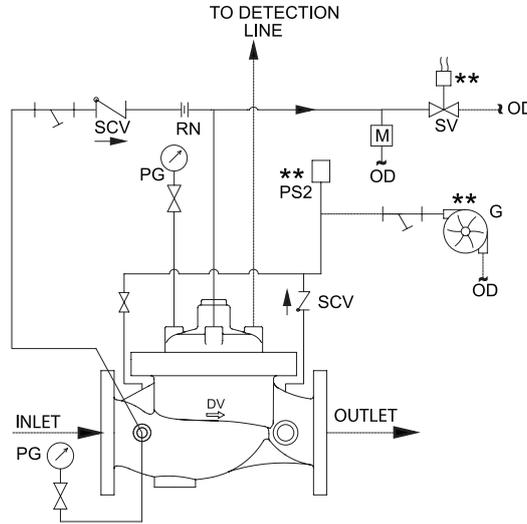

SCHEMATIC 11

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH TEST AND ALARM TRIM FOR HORIZONTAL MOUNTING

SH2-TDT

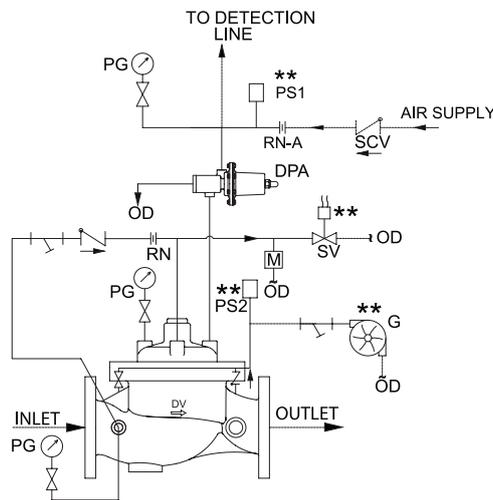


SCHEMATIC 12

DV	Deluge Valve	∩	Valve	↯	Swing Check Valve
SV	Solenoid Valve	---	By User	∠	Angle Valve
G	Sprinkler Alarm (WMG)	**	Optional	DPA	Dry Pilot Actuator
M	Emergency Release Station	∩	Strainer	RN-A	Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)	∩	Open Drain	SCV	Swing Check Valve
PS1	Low Air Alarm Pressure Switch	PG	Pressure Gauge		
PS2	Waterflow Pressure Alarm Switch				

## SCHEMATIC FOR WET PILOT BASIC TRIM WITH DRIP AND DRAIN TRIM FOR HORIZONTAL MOUNTING


SH2-TWD

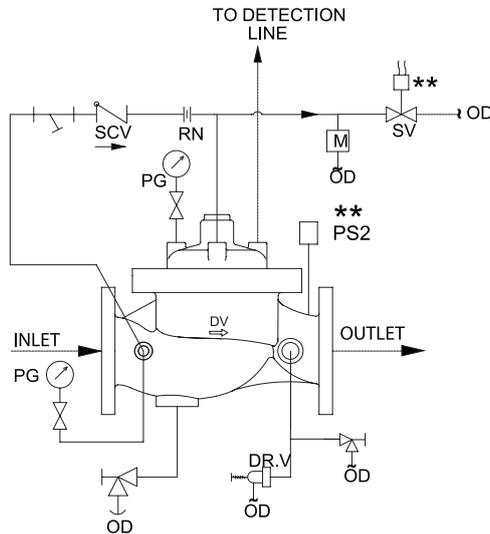

SCHEMATIC 13

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH DRIP AND DRAIN TRIM FOR HORIZONTAL MOUNTING

SH2-TDD

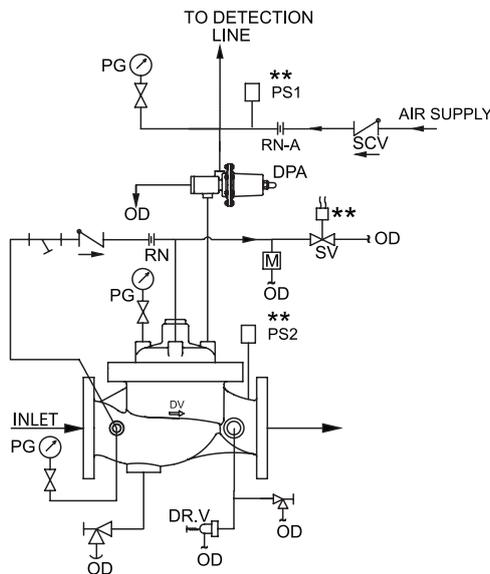


SCHEMATIC 14

DV	Deluge Valve	∩	Valve	↯	Swing Check Valve
SV	Solenoid Valve	---	By User	↯	Angle Valve
G	Sprinkler Alarm (WMG)	**	Optional	DPA	Dry Pilot Actuator
M	Emergency Release Station	↯	Strainer	RN-A	Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)	↯	Open Drain	SCV	Swing Check Valve
PS1	Low Air Alarm Pressure Switch	PG	Pressure Gauge		
PS2	Waterflow Pressure Alarm Switch				

## SCHEMATIC FOR WET PILOT BASIC TRIM WITH TEST AND ALARM TRIM & DRIP AND DRAIN TRIM FOR HORIZONTAL MOUNTING


SH2-NTW

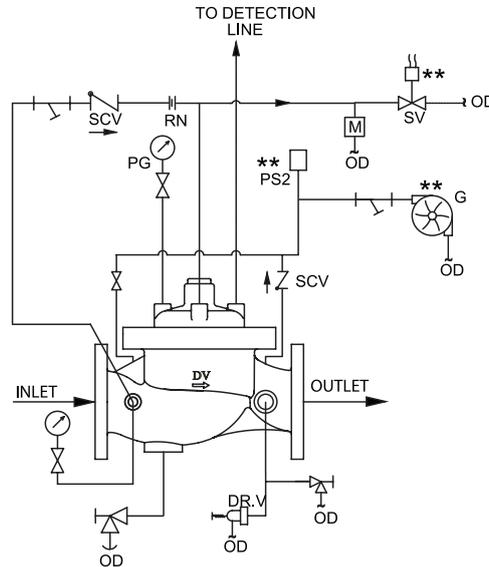

SCHEMATIC 15

## SCHEMATIC FOR DRY PILOT BASIC TRIM WITH TEST AND ALARM TRIM & DRIP AND DRAIN TRIM FOR HORIZONTAL MOUNTING

SH2-NTD

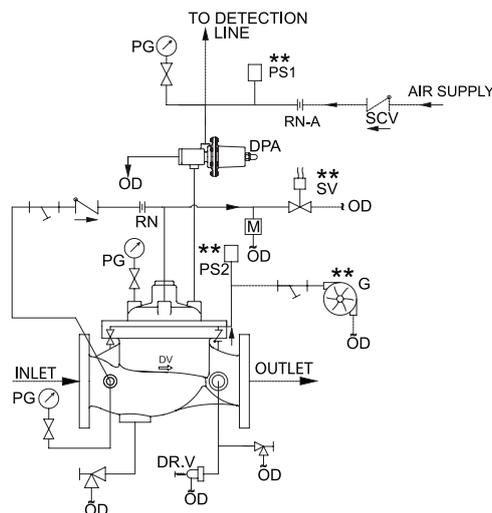


SCHEMATIC 16


DV	Deluge Valve		Valve		Swing Check Valve
SV	Solenoid Valve		By User		Angle Valve
G	Sprinkler Alarm (WMG)		Optional		DPA Dry Pilot Actuator
M	Emergency Release Station		Strainer		RN-A Restriction Nozzle (Air Line)
RN	Restriction Nozzle (Priming Line)		Open Drain		SCV Swing Check Valve
PS1	Low Air Alarm Pressure Switch		Pressure Gauge		
PS2	Waterflow Pressure Alarm Switch				

## SPRINKLER HEIGHT LIMITATION


### DV 200NB

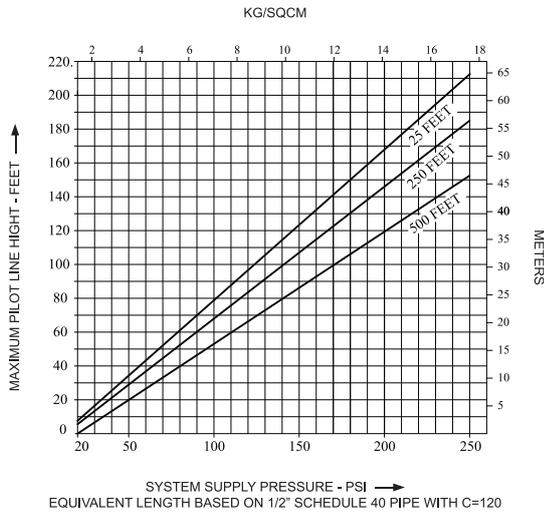


### DV 150NB

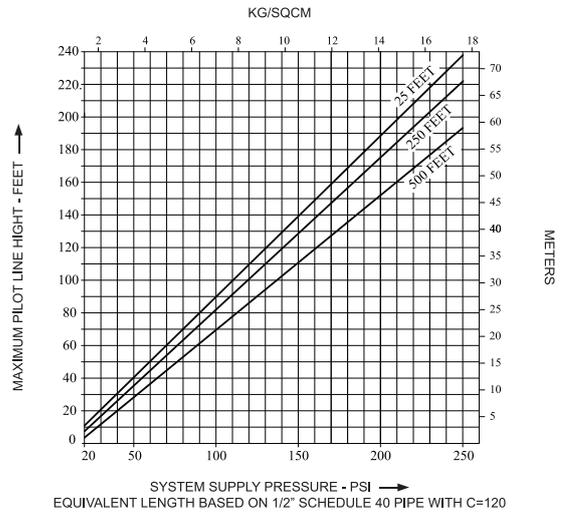


### DV 100NB

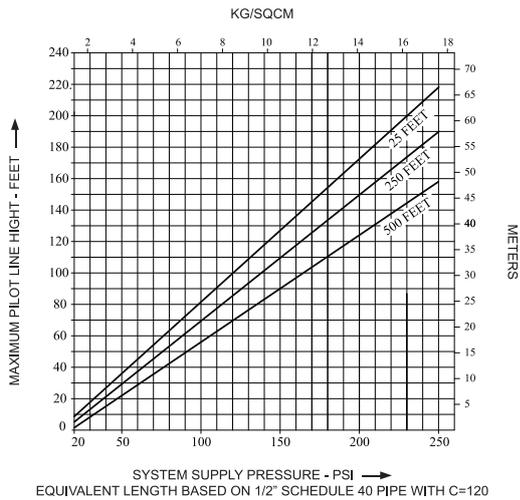

### DV 80NB

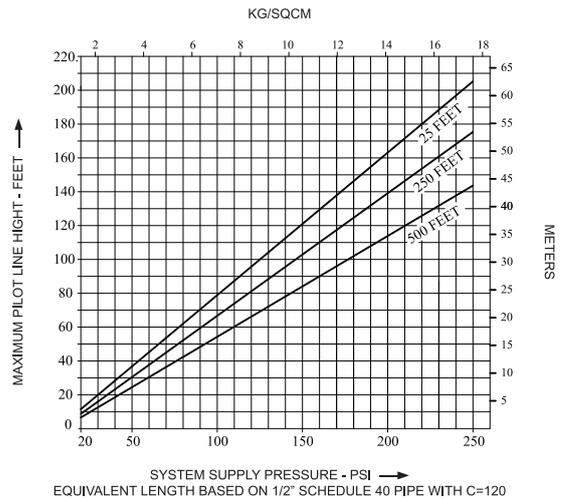


### DV - 50NB

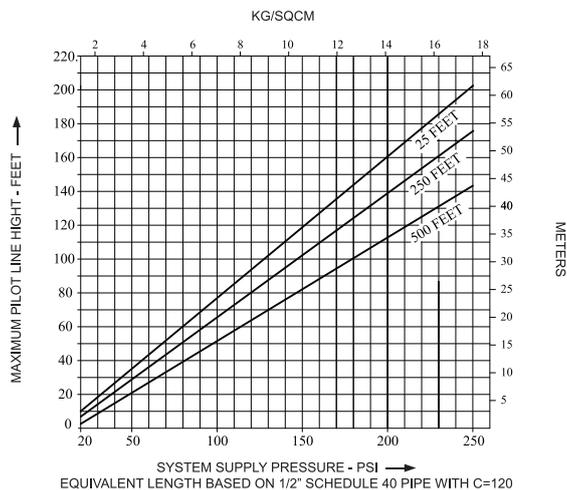

## NOMINAL PRESSURE LOSS VS FLOW

(\* Flow at 15 feet per second [4.57 meter per second])

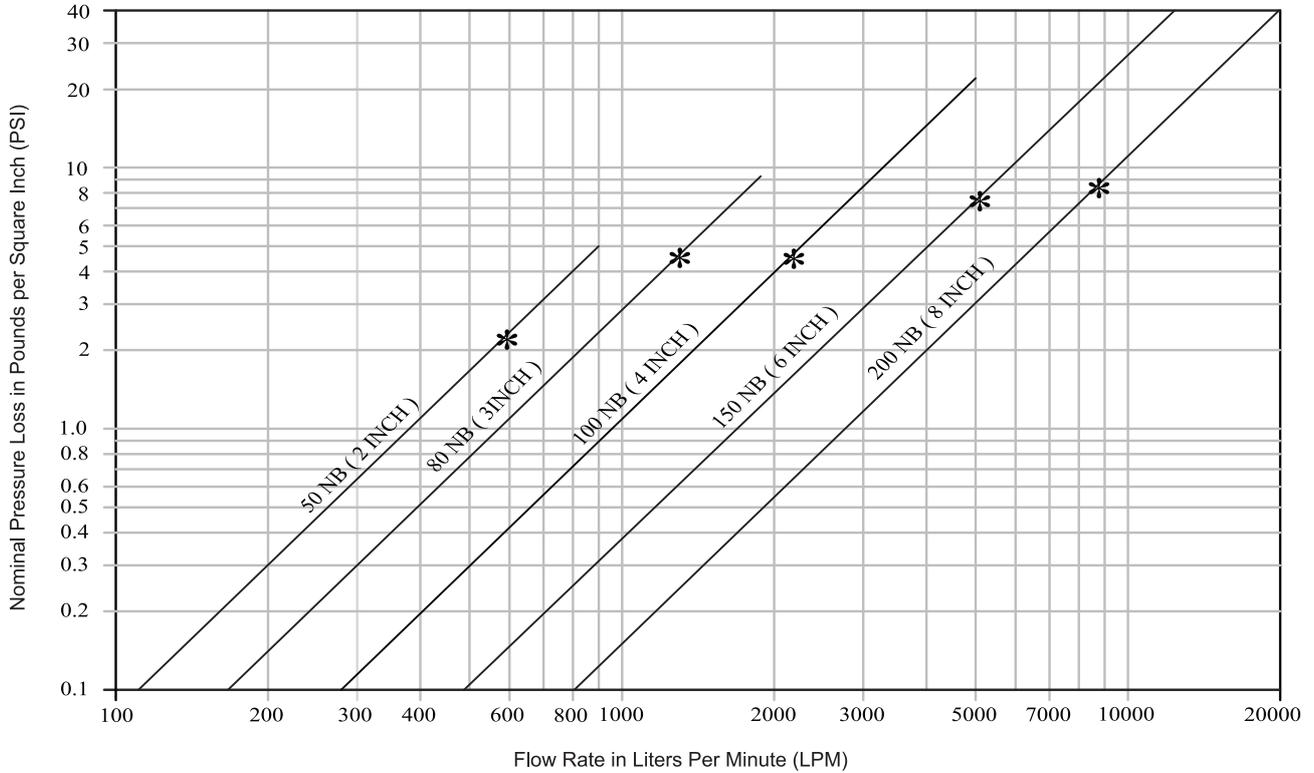

\* 2.3 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 594 LPM thru 50NB DV

\* 4.7 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 1308 LPM thru 80NB DV

\* 4.7 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 2255 LPM thru 100NB DV

\* 7.5 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 5117 LPM thru 150NB DV

\* 8.4 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 8854 LPM thru 200NB DV